

DAMP PATCHES ON CEILING/ PART ROOF REPAIR



• WHY THIS HAPPENS •

- Exposure to harsh weather and changes in temperature lead to cracks in roof
- Cracks on parapet lead to seepage inside the house
- Cracks & poor finish on wall and floor junction result in leakage
- Improper terrace slope can lead to leakage

Solution

DR. FIXIT SURESEAL



• Why choose Dr. Fixit Sureseal •



Stop leaks in
4 hrs



Excellent adhesion
to roof



Flexible coating can fill
cracks up to 0.5 mm



Tintable in
pastel shades



Easy to apply & dries
faster, allowing for
quicker work

• How to Apply •

STEP 1

Surface must be clean, sound condition to ensure adequate adhesion.




STEP 2

Repair debonded screed & cracks with PMM (Polymer-modified mortar) in 1:3 ratio (1 part cement : 3 parts sand) mixed with **Dr. Fixit Pidicrete URP** at the rate 10% by weight of cement, add water as required.



STEP 3

Apply 2 coats of **Dr. Fixit Sureseal** without any dilution, maintaining coverage of 20-25 sq. ft /kg /2 coats.

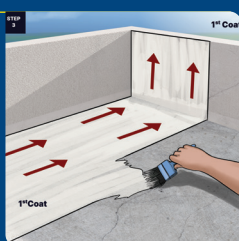

STEP 4

Allow first coat to dry for approx. 4 hrs before applying second coat at 90° to the first coat.

